



* NOTE: IN-LINE CONNECTORS
MUST BE DISCONNECTED IF THE
STOCK AIR FLOW METER IS
RECONNECTED